

AURATON

MANUALS



Weekly, wired thermostat
Description of the AURATON Libra
Turning AURATON Libra on for the first time
Introduction to programming
Programming
Manual control
Anti-freezing temperature
Resetting AURATON Libra
Master reset of AURATON Libra
Configuration settings
PWM operating mode
Additional remarks
The AURATON Libra connection schematics
Cleaning and maintenance
Technical specifications
Disposing of the devices
Download

AURATON Libra



PDF



User manual ver. 202000822

The document presents collected information on safety, assembly and use of AURATON Libra.

Weekly, wired thermostat

AURATON Libra is a weekly, wired thermostat designed to work with a gas or electric heating device.



3 independently adjustable temperatures

Day, night, anti-freezing.



9 independent temperature programs

Including 6 user-modifiable programs.

LCD

Backlit LCD display

The backlit display allows you to supervise the operation of the device even in poorly lit rooms.

Weekly, wired thermostat

Description of the AURATON Libra

Turning AURATON Libra on for the first time

Introduction to programming

Programming

Manual control

Anti-freezing temperature

Resetting AURATON Libra

Master reset of AURATON Libra

Configuration settings

PWM operating mode

Additional remarks

The AURATON Libra connection schematics

Cleaning and maintenance

Technical specifications

Disposing of the devices


Download

Description of the AURATON Libra



Weekly, wired thermostat

There is a backlit LCD display, four function buttons and a temperature setting knob with an **OK** button on the front part of the regulator's casing.

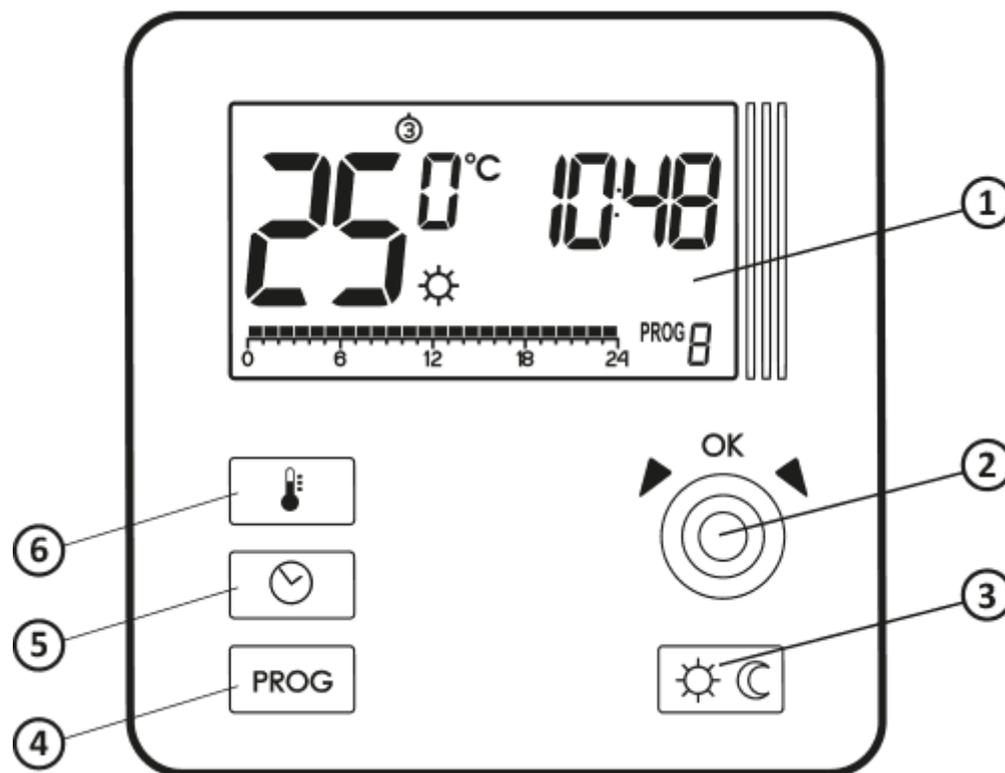

1 – LCD display

2 – setting knob with integrated **OK** button

3 – mode selection buttons:

☀ – day mode – comfort,

Weekly, wired thermostat

Description of the AURATON Libra

Turning AURATON Libra on for the first time

Introduction to programming

Programming

Manual control

Anti-freezing temperature

Resetting AURATON Libra

Master reset of AURATON Libra

Configuration settings

PWM operating mode

Additional remarks

The AURATON Libra connection schematics

Cleaning and maintenance

Technical specifications

Disposing of the devices

Download




☾ – night mode – economic

4 – selection button

5 – date/time/day of week setting button

6 – temperature setting button

Display

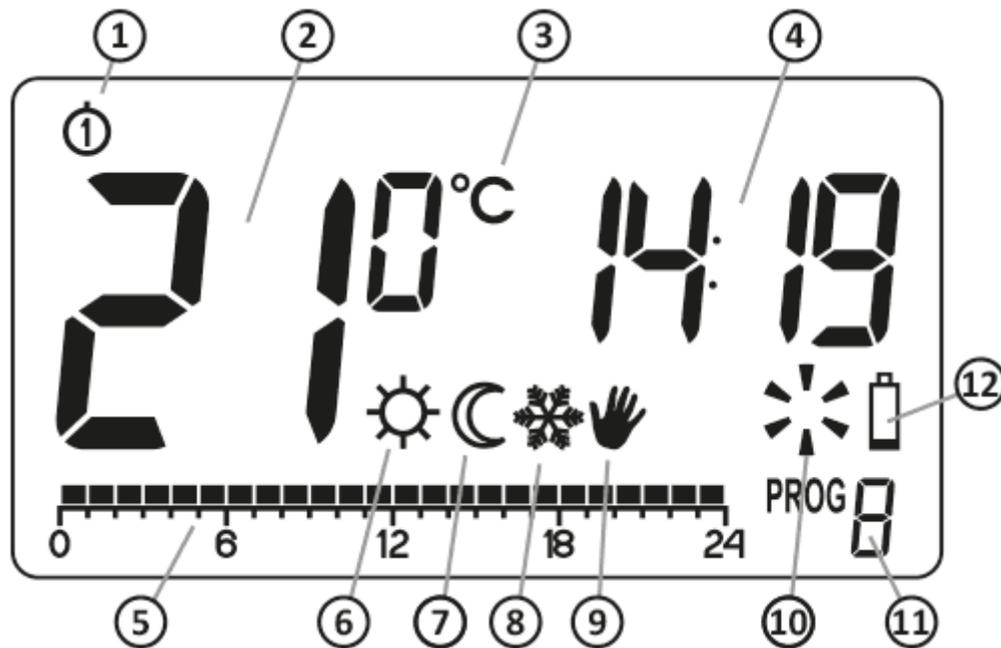

1. **Day of the week** (①-⑦) – Indicates what day of the week it is. Each day is assigned a number.

Weekly, wired thermostat

Description of the AURATON Libra

Turning AURATON Libra on for the first time

Introduction to programming

Programming

Manual control

Anti-freezing temperature

Resetting AURATON Libra

Master reset of AURATON Libra

Configuration settings

PWM operating mode

Additional remarks

The AURATON Libra connection schematics

Cleaning and maintenance

Technical specifications

Disposing of the devices

Download



2. **Temperature** – AURATON Libra displays the temperature of the room in which it is installed in normal operation mode.
3. **Temperature unit** – tells you that the temperature is displayed in Celsius degrees (°C).
4. **Clock**
Time is displayed in a 24-hour system.
5. **Timeline**
Program progress indicator. The timeline is divided into 24 segments, each of which corresponds to one hour. It shows how a given program is implemented. (see chapter “Timeline”)
6. **Day mode indicator (☀)**
Indicates that AURATON Libra is operating in the day mode. (see chapter “Temperature programming”)
7. **Night mode indicator (☾)**
Indicates that AURATON Libra is operating in the night mode. (see chapter “Temperature programming”)
8. **Anti-freezing mode indicator (❄)**
Indicates that AURATON Libra is operating in the anti-freezing mode. (see chapter “Anti-freeze mode”)
9. **Manual control indicator (✋)**
Appears when no program is used. (see chapter “Manual control mode”)
10. **AURATON Libra activation indicator (⚡)**
Segment giving information about the operating status of AURATON Libra. Visible when the regulator is turned on.

Weekly, wired thermostat
 Description of the AURATON Libra
 Turning AURATON Libra on for the first time
 Introduction to programming
 Programming
 Manual control
 Anti-freezing temperature
 Resetting AURATON Libra
 Master reset of AURATON Libra
 Configuration settings
 PWM operating mode
 Additional remarks
 The AURATON Libra connection schematics
 Cleaning and maintenance
 Technical specifications
 Disposing of the devices
 Download



11. Program number

Indicates the number of the currently running program. (see chapters “Factory programs” and “Weekly programming”)

12. Dead batteries (🔋)

The indicator is visible when the minimum permissible battery voltage level is exceeded. The batteries need to be replaced as soon as possible.


IMPORTANT:

In order to maintain any programmed parameters, the battery replacement operation should not exceed 30 seconds.

Weekly, wired thermostat
Description of the AURATON Libra
Turning AURATON Libra on for the first time
Introduction to programming
Programming
Manual control
Anti-freezing temperature
Resetting AURATON Libra
Master reset of AURATON Libra
Configuration settings
PWM operating mode
Additional remarks
The AURATON Libra connection schematics
Cleaning and maintenance
Technical specifications
Disposing of the devices
Download

Choosing the right location for AURATON Libra



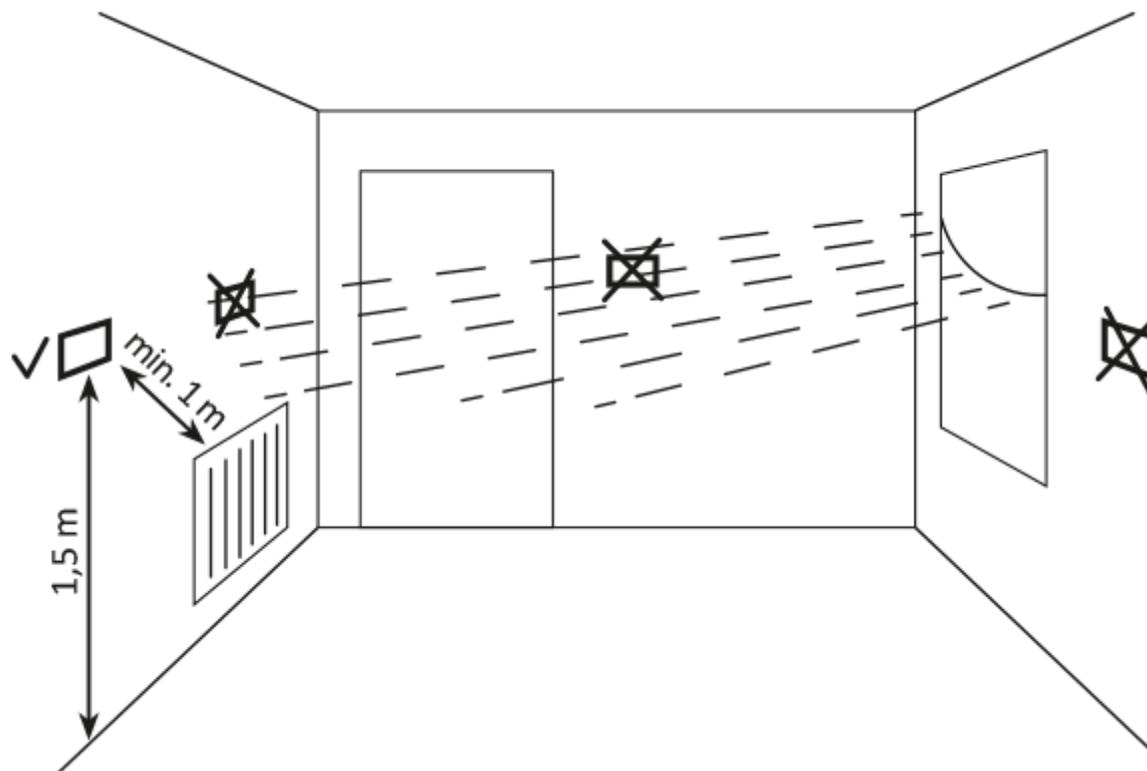


The correct operation of AURATON Libra is largely influenced by its location. Using the device in a place with no air circulation or a place with direct sunlight may result in incorrect temperature control. AURATON Libra should be installed on the internal wall of a building (a partition wall), in an environment with free air circulation. You should avoid proximity to heat-emitting devices (TV, heaters, refrigerators) or locations exposed to direct sunlight. The vicinity of doors and exposing AURATON Libra to possible vibrations may also cause problems with proper operation of the device.

- Weekly, wired thermostat
- Description of the AURATON Libra
- Turning AURATON Libra on for the first time
- Introduction to programming
- Programming
- Manual control
- Anti-freezing temperature
- Resetting AURATON Libra
- Master reset of AURATON Libra
- Configuration settings
- PWM operating mode
- Additional remarks
- The AURATON Libra connection schematics
- Cleaning and maintenance
- Technical specifications
- Disposing of the devices
- Download




Connecting cables to AURATON Libra

To connect the wires, remove the casing as shown below:

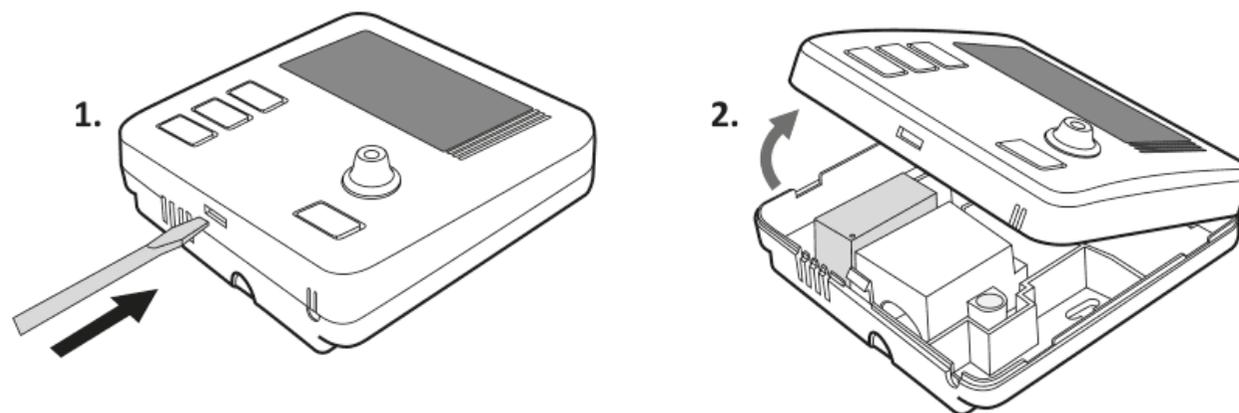


The terminals are located on the back of AURATON Libra, **under the plastic casing**.

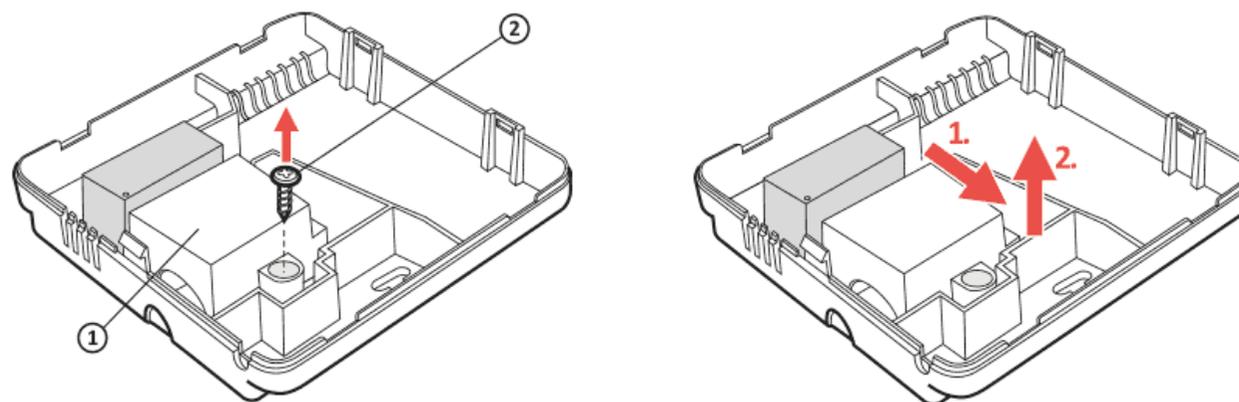

Weekly, wired thermostat
 Description of the AURATON Libra
 Turning AURATON Libra on for the first time
 Introduction to programming
 Programming
 Manual control
 Anti-freezing temperature
 Resetting AURATON Libra
 Master reset of AURATON Libra
 Configuration settings
 PWM operating mode
 Additional remarks
 The AURATON Libra connection schematics
 Cleaning and maintenance
 Technical specifications
 Disposing of the devices
 Download



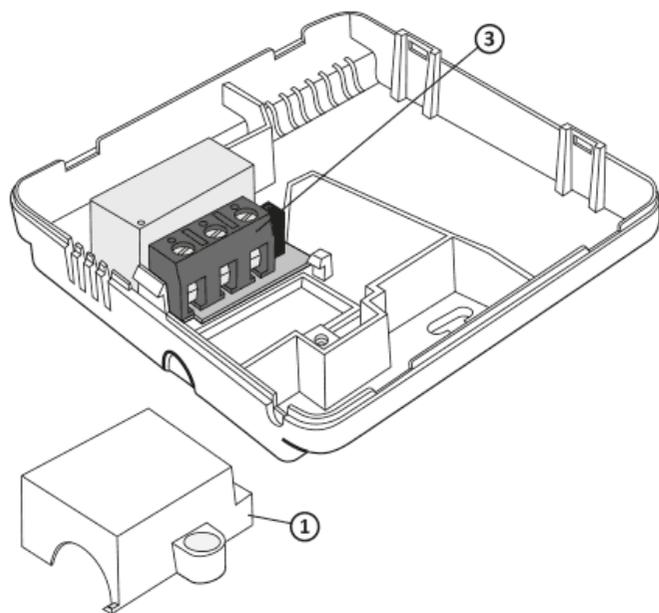

1 – cover


2 – screw

3 – wire terminals

It is a typical single-pole double-throw relay. In most cases, the NC terminal is not used.

IMPORTANT:

After connecting the wires, place the plastic casing back on.

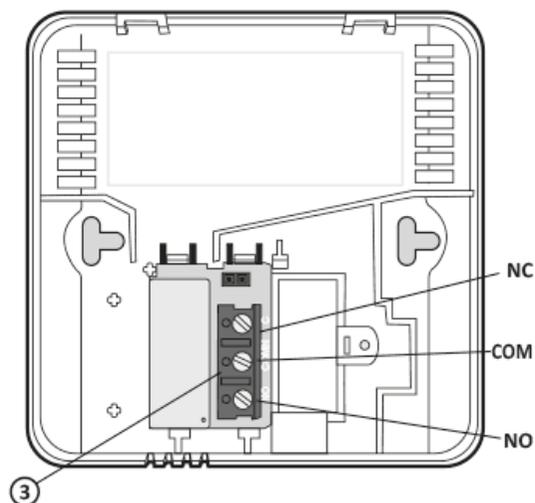

Weekly, wired thermostat

Description of the AURATON Libra

Turning AURATON Libra on for the first time

Introduction to programming

Programming

Manual control

Anti-freezing temperature

Resetting AURATON Libra

Master reset of AURATON Libra

Configuration settings

PWM operating mode

Additional remarks

The AURATON Libra connection schematics

Cleaning and maintenance

Technical specifications


Disposing of the devices

Download

Battery replacement




The battery compartment is located inside AURATON Libra in the front of the casing. To install the batteries, remove the casing of AURATON Libra as shown in the figure below:

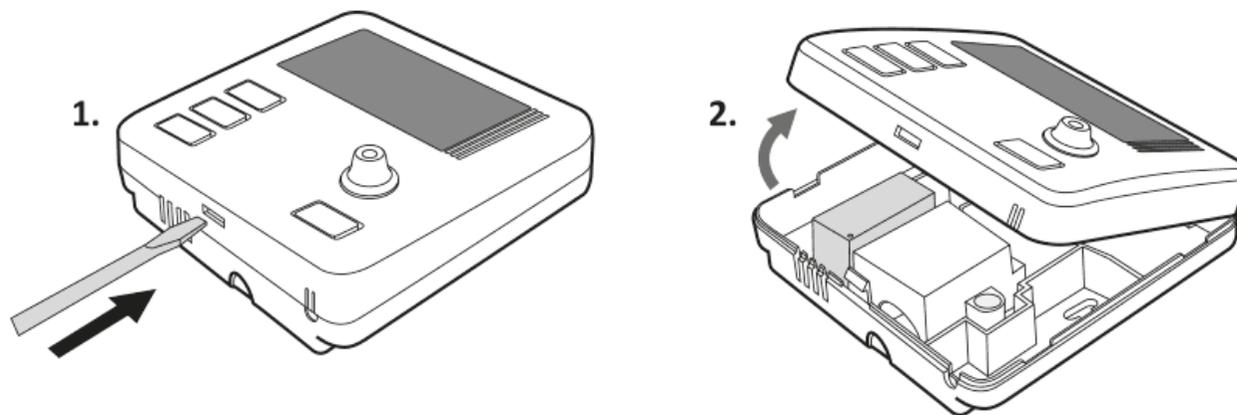**IMPORTANT:**

We recommend using alkaline batteries to power AURATON regulators. Do not use “rechargeable batteries” because their rated voltage is too low.

Weekly, wired thermostat
Description of the AURATON Libra
Turning AURATON Libra on for the first time
Introduction to programming
Programming
Manual control
Anti-freezing temperature
Resetting AURATON Libra
Master reset of AURATON Libra
Configuration settings
PWM operating mode
Additional remarks
The AURATON Libra connection schematics
Cleaning and maintenance
Technical specifications
Disposing of the devices
Download



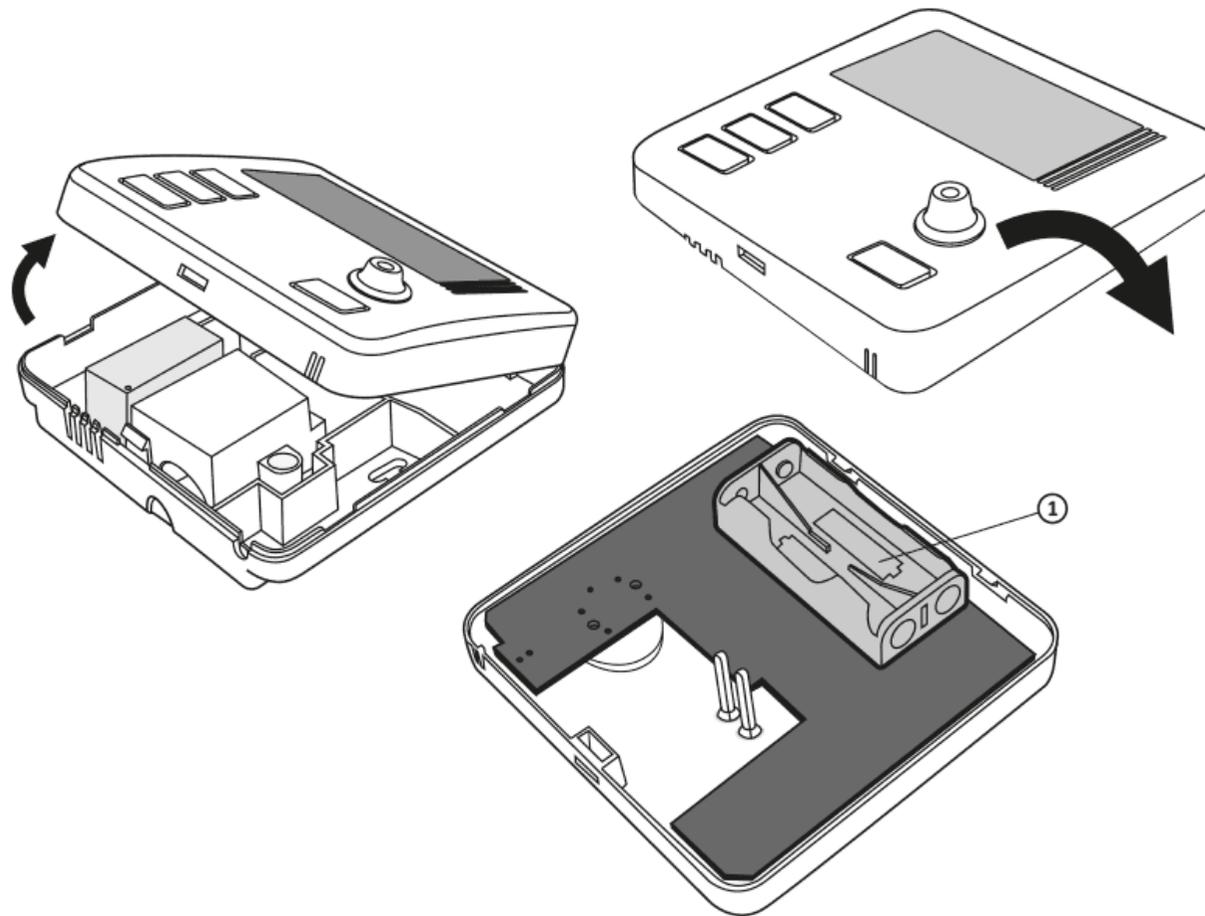

1. – AAA 1.5 V battery socket

Insert two 1.5V AAA batteries into the battery compartment, paying attention to the correct polarity of the batteries.

Weekly, wired thermostat
Description of the AURATON Libra
Turning AURATON Libra on for the first time
Introduction to programming
Programming
Manual control
Anti-freezing temperature
Resetting AURATON Libra
Master reset of AURATON Libra
Configuration settings
PWM operating mode
Additional remarks
The AURATON Libra connection schematics
Cleaning and maintenance
Technical specifications
Disposing of the devices
Download



IMPORTANT:

After replacing the battery and assembling the cover, we recommend pressing the OK button twice to stabilise the relay operation.

Mounting AURATON Libra – the weekly, wired temperature regulator

In order to mount AURATON Libra on the wall:


1. Remove the casing (*as shown in the “Battery Replacement” section*)
2. Drill two holes with a diameter of 6 mm in the wall (*mark the spacing between the holes using the rear part of the AURATON Libra casing*).
3. Put wall plugs in the drilled holes.
4. Fix the rear part of the casing of AURATON Libra to the wall using the screws included in the kit.
5. Put the casing on.

IMPORTANT:

In the case of a wooden wall, there is no need to use wall plugs. It is enough to drill holes with a diameter of 2.7 mm (instead of 6 mm) and screw the screws directly into the wood.

Weekly, wired thermostat
Description of the AURATON Libra
Turning AURATON Libra on for the first time
Introduction to programming
Programming
Manual control
Anti-freezing temperature
Resetting AURATON Libra
Master reset of AURATON Libra
Configuration settings
PWM operating mode
Additional remarks
The AURATON Libra connection schematics
Cleaning and maintenance
Technical specifications
Disposing of the devices
Download



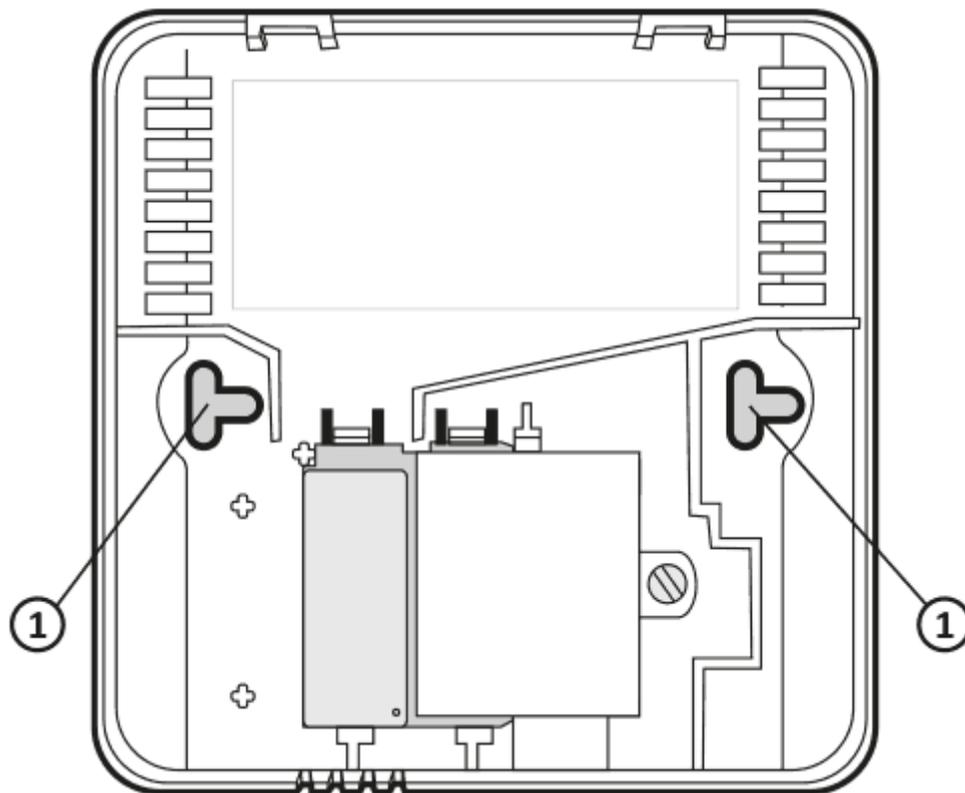


1 – hole for fastening screw

Putting the casing back on: IMPORTANT

Pay attention to the pins that transmit control to the relay when putting the front part of the casing to the rear part.

Weekly, wired thermostat
 Description of the AURATON Libra
 Turning AURATON Libra on for the first time
 Introduction to programming
 Programming
 Manual control
 Anti-freezing temperature
 Resetting AURATON Libra
 Master reset of AURATON Libra
 Configuration settings
 PWM operating mode
 Additional remarks
 The AURATON Libra connection schematics
 Cleaning and maintenance
 Technical specifications
 Disposing of the devices
 Download



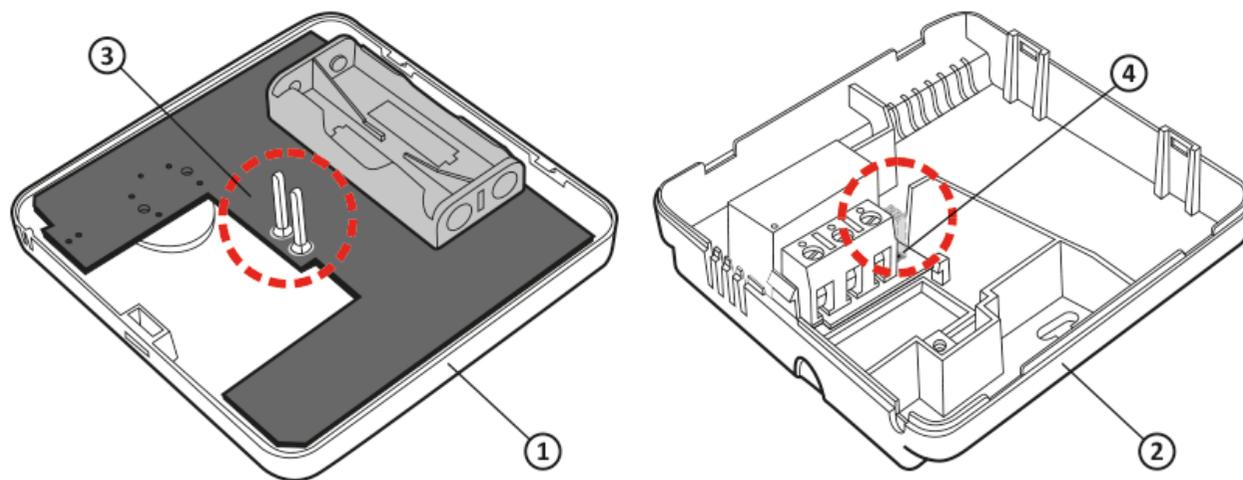

- 1 – Front casing
- 2 – Rear casing
- 3 – Pins
- 4 – The socket of the pin connector or the place where the pins contact the board

IMPORTANT:


Make sure that the “pins” are not bent and that they are placed in the correct spots on the relay board when assembling the casing. This is crucial for the proper operation of AURATON Libra.

Weekly, wired thermostat
 Description of the AURATON Libra
 Turning AURATON Libra on for the first time
 Introduction to programming
 Programming
 Manual control
 Anti-freezing temperature
 Resetting AURATON Libra
 Master reset of AURATON Libra
 Configuration settings
 PWM operating mode
 Additional remarks
 The AURATON Libra connection schematics
 Cleaning and maintenance
 Technical specifications
 Disposing of the devices
 Download




Turning AURATON Libra on for the first time


After inserting the batteries correctly into the battery compartment, the LCD screen will display all the segments for a second and then the software version number.

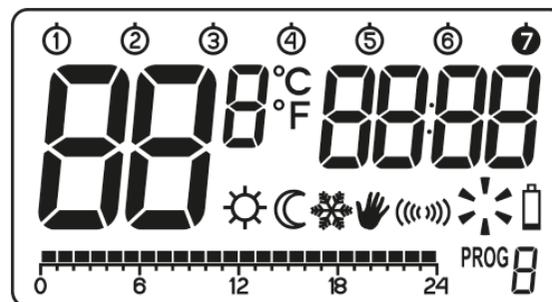

After a while, AURATON Libra will automatically switch to the time setting mode. A flashing item on the screen means that the device is currently in the edit mode. Turn the knob to the left or right to set the required hour and confirm using the **OK** button.

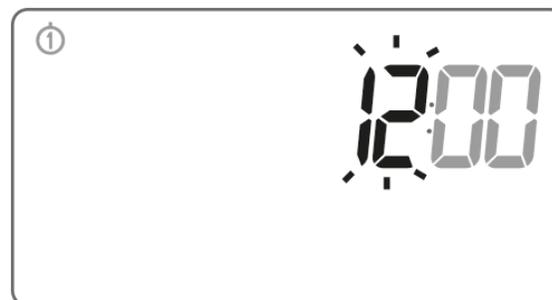

Turn the knob to the left or right to set the correct value on the minute segment and confirm using the **OK** button.

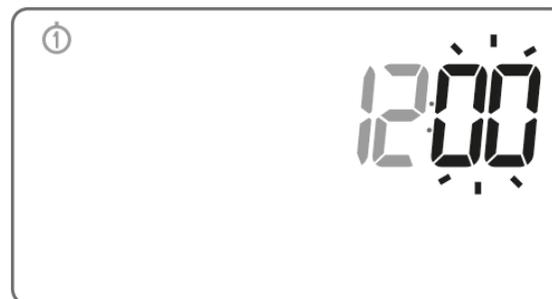

- Weekly, wired thermostat
- Description of the AURATON Libra
- Turning AURATON Libra on for the first time
- Introduction to programming
- Programming
- Manual control
- Anti-freezing temperature
- Resetting AURATON Libra
- Master reset of AURATON Libra
- Configuration settings
- PWM operating mode
- Additional remarks
- The AURATON Libra connection schematics
- Cleaning and maintenance
- Technical specifications
- Disposing of the devices
- Download



A flashing symbol of the day of the week appears in the upper left corner. Turn the knob to the left or right to set the day and confirm the selection using the  button.

**IMPORTANT:**

If no button is pressed for 60 seconds in the initial edit mode, 12:00 o'clock and Monday, as the day of the week, will be set automatically.

IMPORTANT:


When programming any other functions, not pressing any button for 10 seconds is equivalent to using the  button.

Setting the clock and day of the week

To set the clock:

1. Press the  button. The hour segment on the display will start flashing.



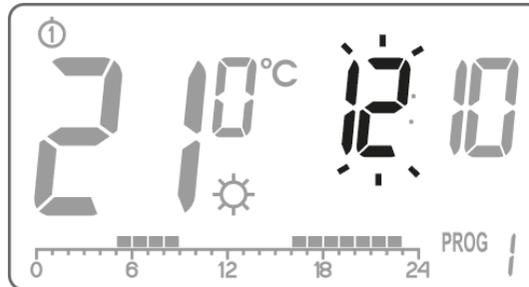

2. Turn the knob to the left or right to set the required hour and confirm with using the  button.

3. Turn the knob to the left or right to set the correct value on the minute segment and confirm using the  button.



4. A flashing symbol of the day of the week appears in the upper left corner. Turn the knob to the left or right to set the day and confirm the selection using the  button.



IMPORTANT:

You can also switch by pressing the  button.



Default program setting

- **Monday – Friday:**

The heating device maintains the day temperature (☀) from **05:00 to 8:00 A.M.** and from **3:00 to 11:00 P.M.**

- **Saturday – Sunday:**

The heating device maintains the day temperature (☀) from **06:00 A.M. to 11:00 P.M.**

- **default temperature settings:**

☀ day temperature – 21,0°C

☾ night temperature – 19,0°C

❄ anti-freeze temperature – 7,0°C

Programming day and night temperatures

AURATON Libra allows you to program 2 types of temperature:

- Day temperature (☀) – from 5 to 30°C
- Night temperature (☾) – from 5 to 30°C

To set one of the temperatures above:

1. Press the  button.



2. The display will show the currently set temperature with one of the two symbols:

☀ – day temperature;

☾ – night temperature.



3. Turn the knob to the left or right to set the desired temperature value.

4. Pressing the  button will switch the edit mode between the day and night temperatures (☀, ☾).

5. After setting the temperatures, confirm using the  button.

IMPORTANT:

The night temperature setting can be equal to or lower than the day temperature. It is impossible for the night temperature to be higher than the day temperature.

Introduction to programming

Timeline

The timeline on the LCD display is divided into 24 sections. Each of them symbolizes 1 hour of the day.

Black rectangles above the timeline mean that the day temperature has been



programmed for specific hours, and that there is no night temperature.

Example:



The figure above shows that from 6.00 A.M. to 11.00 P.M. Auraton Libra will control the heating device in such a way that the room temperature will be day temperature (☀). AURATON Libra will switch to night temperature from 11.00 P.M. to 6.00 A.M. (☾).

Factory programs

In order for AURATON Libra to know when to turn on the day and night temperatures, you should be set to an appropriate program for each day of the week. For this purpose, you can use one of the three factory programs (from 0 to 2):

Program no. 0 – anti-freezing ❄

Unmodifiable factory program. Designed for all-day anti-freezing temperature setting.

Program no. 1 – weekly

Unmodifiable factory program. Sets day temperature from 5:00 to 8:00 A.M. and from 3:00 to 11:00 P.M.



Program no. 2 – weekend

Unmodifiable factory program. Sets day temperature from 6:00 A.M. to 11:00 P.M.

Programs no. 3, 4,....., 8 – user-defined programs

Programs from 3 to 8 are user-defined programs. They can be freely modified and adapted to specific requirements.

Programming


Weekly programming


To program AURATON Libra, set the day temperature intervals for individual days of the week. At other time, night temperature will be set.

Sample AURATON Libra setting from Monday to Sunday. Outside the intervals programmed, the night temperature will be set.

Day	Day temperature
------------	----------------------------



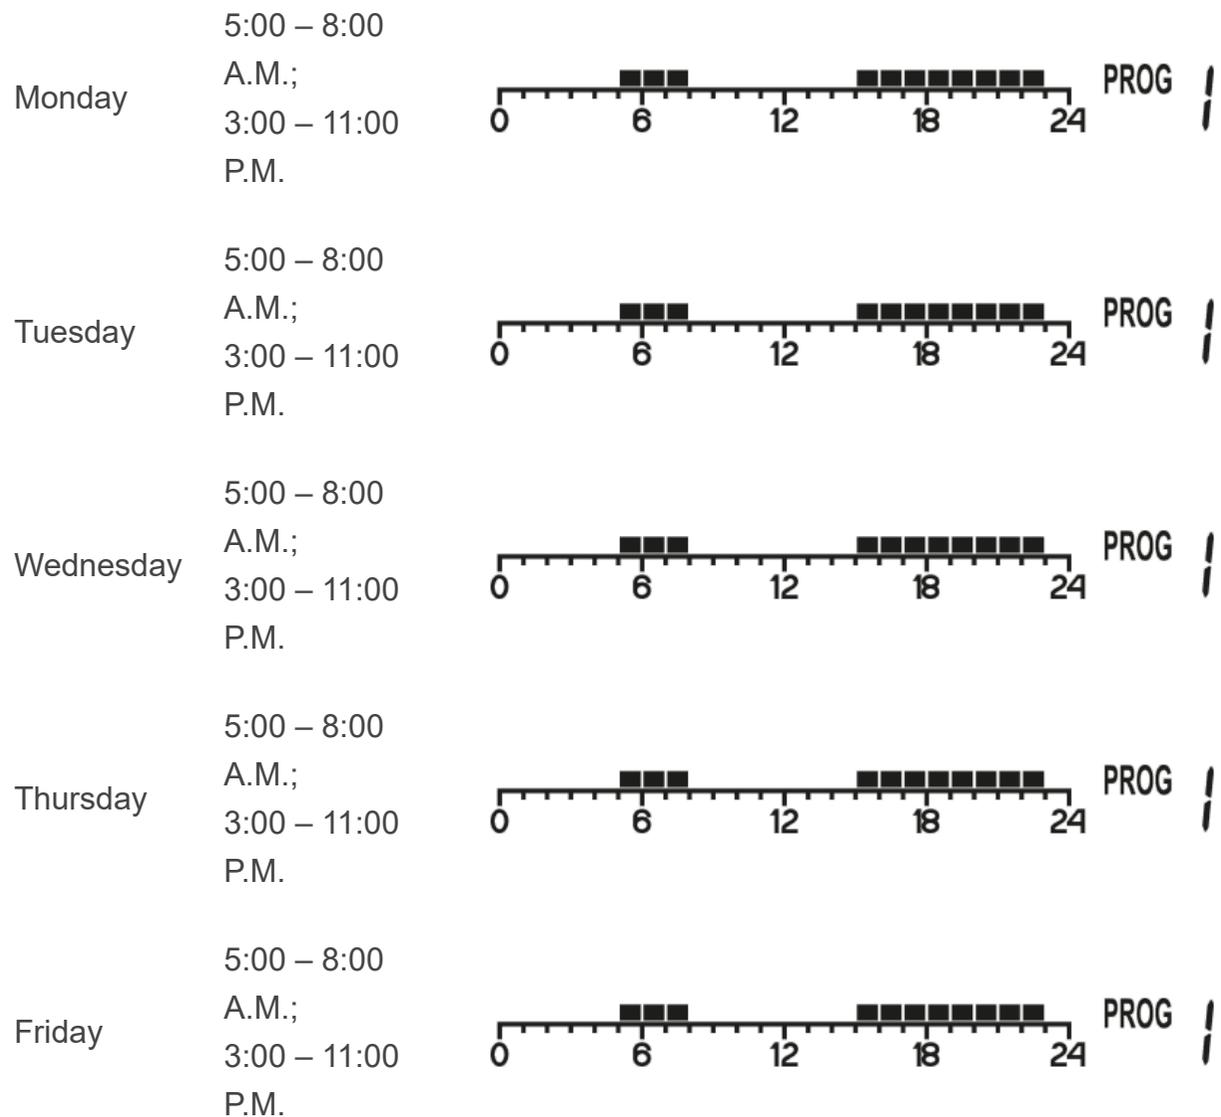


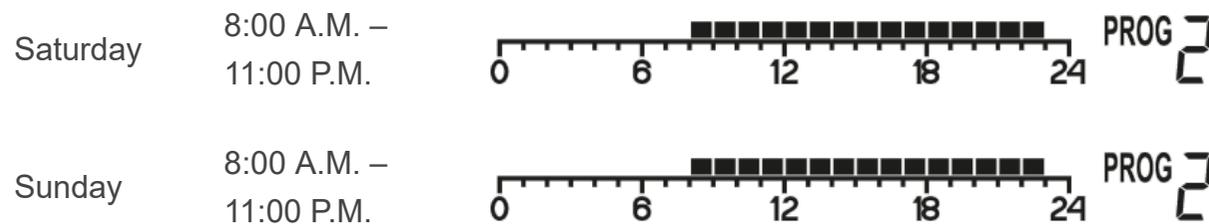

Program selection

To set the program:

1. Press the  key. Program number segment will start blinking.

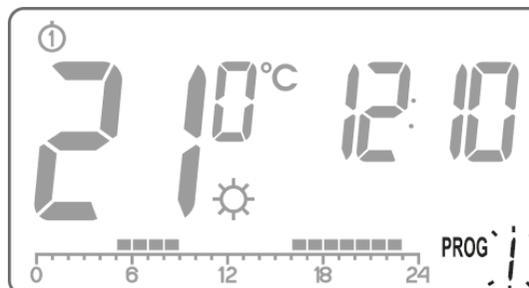


2. Press the  key as many times as required to set the day of the week for the program.



3. Press the  key several times and



select the program number requested. Programs **0-2** are factory-set, programs **3-8** can be edited.

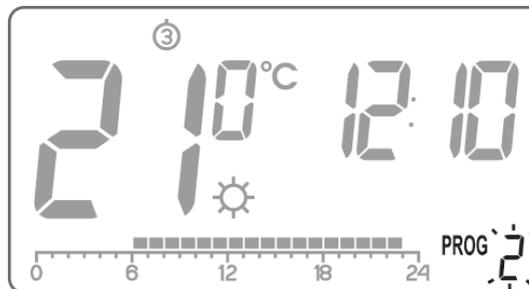


4. Confirm selection pressing the  key.
5. Repeat the procedure for the following days of the week.

Modyfying user-defined programs


To set the program:

1. Press the  key. Program number segment will start blinking.

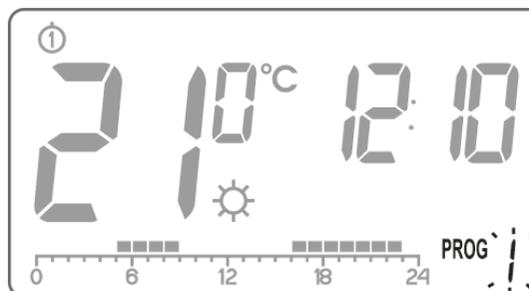


2. Press the  key as many times as required to set the day of the week for the program.




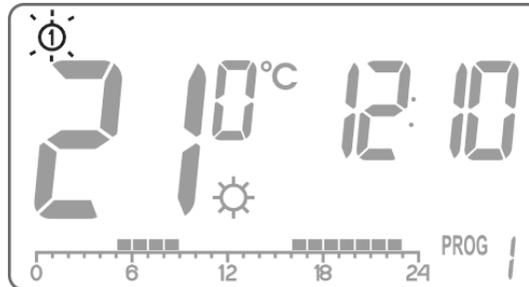

3. Press the **PROG** key several times to select the program number required. Programs **0-2** are factoryset, programs **3-8** can be edited.

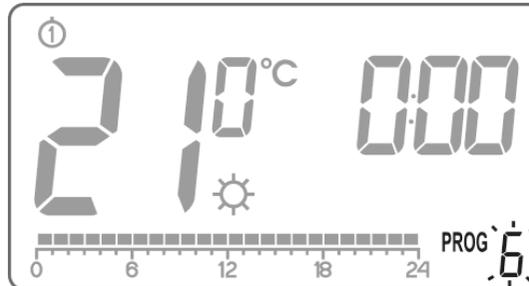

4. All (24) black rectangles will appear on the timeline. Each of them symbolises 1 hour. A visible rectangle indicates day temperature set for the given time. If no rectangle is displayed, night temperature is set.

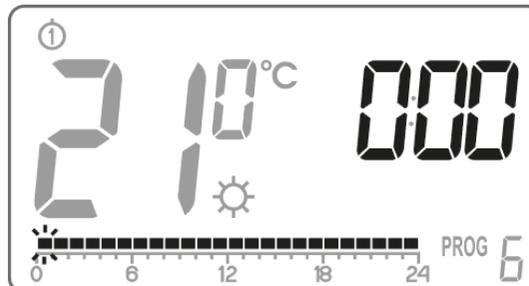


Blinking rectangle indicates the point of the timeline which is modified.


5. Press the **☀/☾** key to select day (rectangle on) or night temperature



(no rectangle). Then, select the time interval for the temperature selected with the knob.

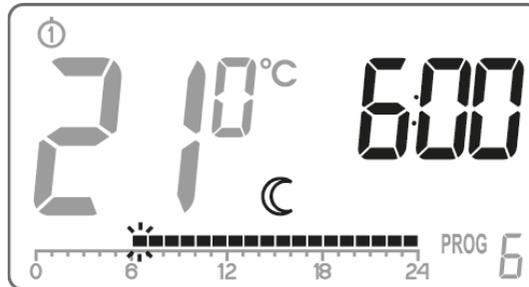

6. By pressing the  key and selecting time interval the entire program is modified.

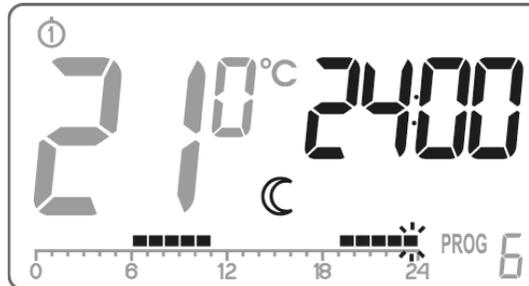

7. Confirm selection with the  key.

NOTE:

Any modified program for a specific day can also be selected and implemented during another day of the week.

Manual control



Option 1:

If, for some reason, you want to stop the current program at a given moment and extend the day or night temperature, you can do it manually, but for not longer than 24 hours. To do this you should:

Hold the  button for 3 seconds. Then, using the knob, select the number of hours of manual operation (24 hours at the most) and confirm the setting using the  button.

AURATON Libra will wait until you choose one of the two temperatures which it should maintain (day or night). The change is made by using the  button or the knob. Confirm the selection using the  button.

Option 2:

If you want to suspend the execution of a given program, e.g. due to a party lasting longer than expected, but AURATON Libra has already started lowering the temperature for the night (the  symbol has appeared on the display), you should: Press the  button, the display will show the symbols of a  and the . The day temperature will then be maintained until the next temperature change carried out by the program.

To withdraw the above-mentioned action press the  button. The  symbol will disappear from the display.

Similarly, if the program is using the day temperature but you want it to implement the night temperature immediately, you should:

Press the  button. The display will show the symbols of a  and the . The night



temperature will then be maintained until the next temperature change carried out by the program. To withdraw the above-mentioned action press the  button. The  symbol will disappear from the display.

Anti-freezing temperature

In the event of being away for a long time, it is possible to turn on the anti-freezing temperature mode. It allows you to avoid the unpleasant consequences of water freezing in the heating system by automatically setting the temperature to 7°C. To set the anti-freezing program, simply select **program 0** for the desired day of the week.

Resetting AURATON Libra

To perform a **reset**, remove the battery and wait until the data on the display disappears.

Master reset of AURATON Libra




MASTER RESET is performed by pressing and holding the **OK** button and at the same time installing the batteries. This causes AURATON Libra to return to its factory settings.

IMPORTANT:

All user-defined programs will be removed!

Configuration settings

Configuration settings are set one after another:

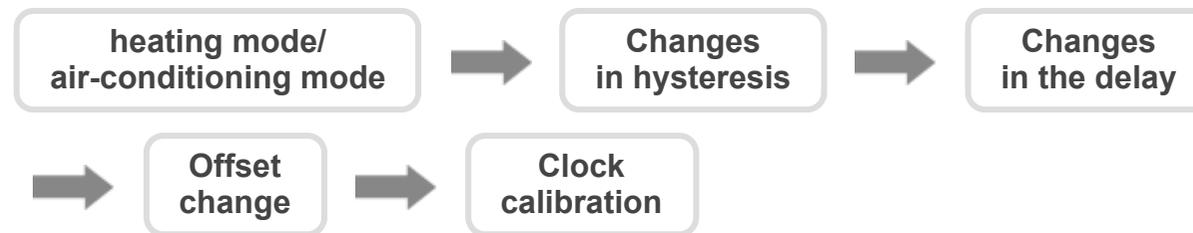

To enter the edit mode of the configuration settings, hold the **PROG** and **OK** buttons simultaneously for 3 seconds until the settings menu is displayed.

Heating mode/air-conditioning mode



AURATON Libra can work in two modes:



Heating mode (preset) – set it if you want AURATON Libra to cooperate with heating devices.



Air-conditioning mode – set it if you want AURATON Libra to cooperate with air-conditioning devices.


Turn the knob to the left or right to set the required mode. Confirm your choice by pressing the  button. AURATON Libra will proceed to change the next parameter.

Changes in hysteresis

Hysteresis is supposed to prevent too frequent activation of the actuator due to small temperature fluctuations.

*For example, in the case of **HI 2** hysteresis, when the temperature is set to 20°C, the boiler will be switched on at 19.8°C, and switched off at 20.2°C.*

*In the case of **HI 4** hysteresis, when the temperature is set to 20°C, the boiler will be switched on at 19.6°C, and switched off at 20.4°C.*

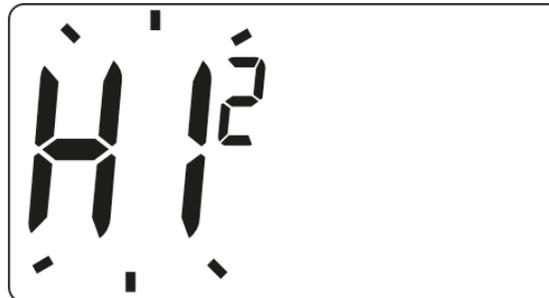

The hysteresis change mode is signaled by a flashing HI. Turn the knob to the left or right to set the desired hysteresis.

HI 2 – $\pm 0,2$ °C (preset),

HI 4 – $\pm 0,4$ °C,

HI P – PWM operating mode (see chapter “PWM operating mode”).

Confirm your choice by pressing the  button. AURATON Libra will proceed to change the next parameter.

Changes in the delay

The delay prevents too frequent activation of the actuator, e.g. due to temporary drafts (caused by opening the window, etc.).

The delay change mode is signaled by a flashing **90:SE**. By turning the knob left or right, we set the delay.

90:SE – delay of 90 s (preset),

0:SE – no delay

Confirm your choice by pressing the  button. AURATON Libra will proceed to change the next parameter.



Offset change

Offset allows you to calibrate temperature indications with a tolerance of $\pm 3^{\circ}\text{C}$. AURATON Libra may for example show that the temperature in the room is 23°C , while a regular room thermometer next to it may show 24°C . Changing the offset by +1 degree, will make AURATON Libra show the same temperature as the room thermometer.

The offset change mode is signaled by a flashing OFFS. By turning the knob to the left or right, you can set the desired value in the range from -3.0 to 3.0 (preset – 0.0). Confirm your choice by pressing the  button. AURATON Libra will return to the normal operating mode.

IMPORTANT:

If no button is pressed for 10 seconds while changing the configuration settings, AURATON Libra will return to the normal operating mode.

IMPORTANT:

Pressing any function button for the first time always turns on the backlight, and then the function of a specific button.

Clock calibration



This function is used to correct the clock indications in case of any deviations. If the clock is working incorrectly within a week, the extent of incorrect clock indications should be determined. This value should be entered in AURATON Libra in the form of seconds.

Example 1:

After a week of operation, AURATON Libra shows time accelerated by 1 minute and 20 seconds ($60 + 20 = 80$). In this case you should slow down the clock by setting C -80.

Example 2:

After a week of operation, the clock in AURATON Libra is 2 minutes slow ($2 \times 60 = 120$). In this case you should speed up the clock by setting C 120.

IMPORTANT:

The number of seconds should be determined after one week of operation of AURATON Libra for the clock calibration function to work correctly (7 days = the number of seconds to be added or subtracted, maximum 294 seconds).

IMPORTANT:


If no button is pressed for 10 seconds while changing the configuration settings, AURATON Libra will return to the normal operating mode.



PWM operating mode (Pulse-Width Modulation)

By changing the hysteresis settings (chapter “Configuration settings”), you can turn on the PWM operating mode. In this mode, AURATON Libra cyclically turns on the heating device in order to minimize temperature fluctuations. AURATON Libra checks temperature rise times and temperature drop times.

Knowing these values makes AURATON Libra turn on and off the heating device in appropriate cycles to maintain the temperature to the set value as close as possible.

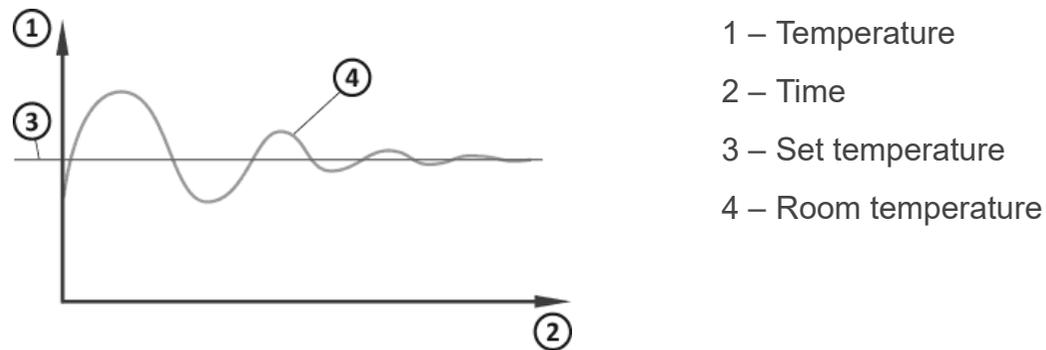

IMPORTANT:

AURATON Libra can turn on the heating device despite the fact that the temperature in the room is higher than the set temperature in the PWM mode. This is caused by the PWM algorithm aiming at maintaining the set temperature and anticipating the behavior of the thermal system.





Additional remarks

- At least 30 seconds must elapse between switching the relay off and on again.
- AURATON Libra enables you to turn on or off the control functions at any time (e.g. after a heating season) by briefly holding down (for about 5 seconds) the  button (AURATON Libra will only show the current time and room temperature – no “timeline”).
- Pressing any function button for the first time always turns on the backlight, and then the function of a specific button. When using the knob, each step keeps the backlight on.
- When programming any function, not pressing any button for 10 seconds is equivalent to pressing the  button.

The AURATON Libra connection schematics



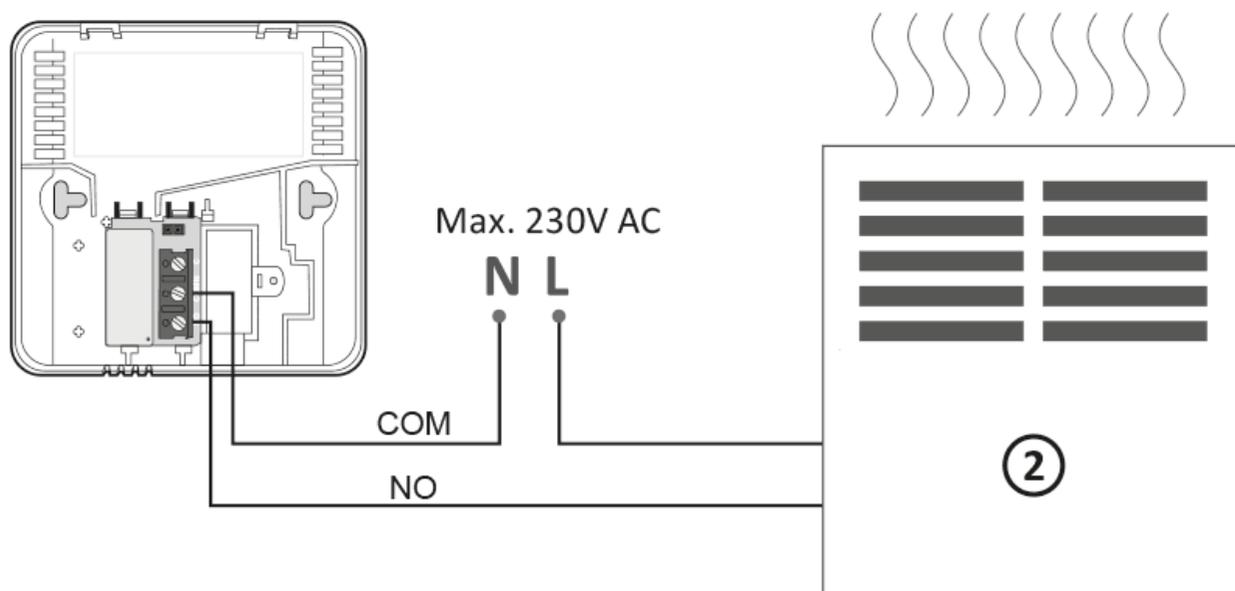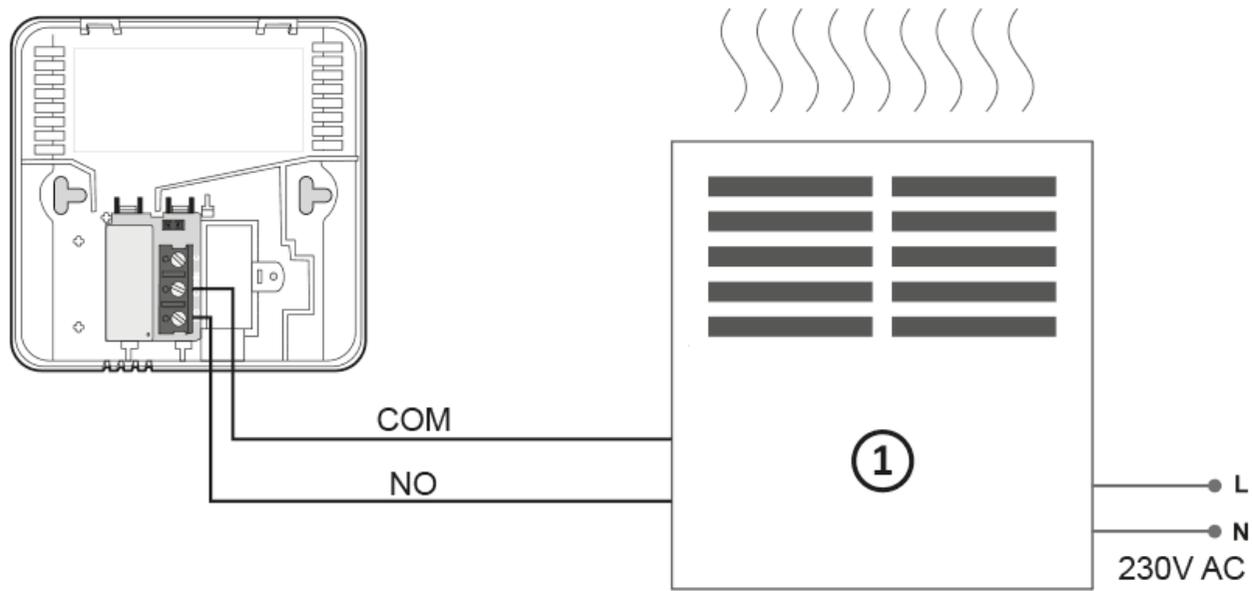

1. Heating device *e.g. a gas furnace*
2. Electric heating device (MAX 230 V AC, 16 A)

Cleaning and maintenance

- The outside part the device should be cleaned with a dry cloth. Do not use solvents (such as benzene, thinner or alcohol).
- Do not touch the device when your hands are wet. It may cause electric shock or serious damage to the device.
- Do not expose the device to excessive smoke or dust.
- Do not touch the screen with a sharp object.
- Keep the device away from liquids or moisture.

Technical specifications

Power supply:	2 x AAA (2 x 1.5 V), alkaline
Working temperature range:	0 – 45 °C
Signalling the working status:	LCD display



Number of temperature levels:	2
Anti-freeze temperature:	7 °C
Temperature measurement range:	5 – 30 °C
Hysteresis:	±0,2 °C / ±0,4 °C / PWM
Relay load capacity:	Max. 250 V AC, max. 16 A
Working cycles:	Weekly programmable
Level of security:	IP20
Dimensions [mm]:	90 x 90 x 36

Disposing of the devices



The devices are marked with the crossed-out wheeled bin. According to European Directive 2012/19/EU and the Waste Electrical and Electronic Equipment Act, this kind of marking indicates that the equipment, after its operational life must not be disposed of together with other waste from households.

The user shall return it to a collection point for electrical and electronic waste.



Hereby, LARS Andrzej Szymanski declares that the radio equipment type AURATON Libra is in compliance with Directive 2014/53/EU and 2011/65/EU. The full text of the EU declaration of conformity is available below in the download area.

Contact and address of the manufacturer:

LARS, ul. Świerkowa 14
64-320 Niepruszewo
www.auraton.pl

Download

- [User manual](#)
 - [Declaration of conformity](#)
-

